



## CV Boot Clamp Pliers with Socket

### 9BB13

- Use to remove and install stainless CV boot clamp
- Can be used with 3/8" flexible handle bar or torque wrench
- Suitable for Audi, Opel, Citroen, SEAT, BMW, Mercedes-Benz, Honda, Nissan, Mazda, Ford, GM, Chrysler

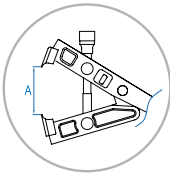

KT NO.	inch	L mm	A max mm		
9BB13	11	278	45	887.8	6 / 24

## Exhaust Pipe Hanger

### 9BP11

- Use to remove rubber holders from exhaust brackets
- Suitable for general vehicle types




KT NO.	inch	L mm	A max mm		
9BP11	10	250	60	338.6	12 / 36

## CV Boot Clamp Installer

### 9BB31

- Use to cut and install clamp with built-in cutting arm
- Includes locking device and ratchet function
- Suitable for general vehicle types

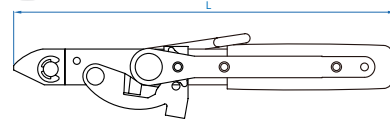

Lock



Cut



KT NO.	inch	L mm		
9BB31	6-1/2	124	346.8	12 / 36

## Handbrake Cable Pliers

### 9BC11

- For hand brake cable removal and replacing
- Suitable for Audi, BMW, Citroen, Nissan, Peugeot, Seat, Renault, Rover, etc



KT NO.	inch	L mm	A max mm	B mm		
9BC11	9	230	60	5	198.0	12 / 48

## Drum Brake Spring Pliers


### 9BC121

### 9BC122


- Designed to remove and replace brake retaining spring on drum brakes



KT NO.	inch	L mm		
9BC121	8-1/2	215	230.0	12 / 72
9BC122	12-1/2	320	426.0	12 / 36

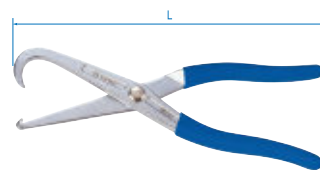

9BC121

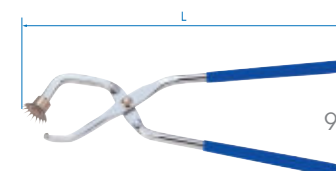

9BC122